



Performing a Unit Firmware Update Using the VSIP Device Configurator


1. Launch the VSIP Device Configurator and enter its password (the default is “dvtel”).
2. Click the **Program Options** button.
3. Checkmark **Detect All Units on LAN** and click the **Default** button by the **VSIP Port** field. Click **OK**.

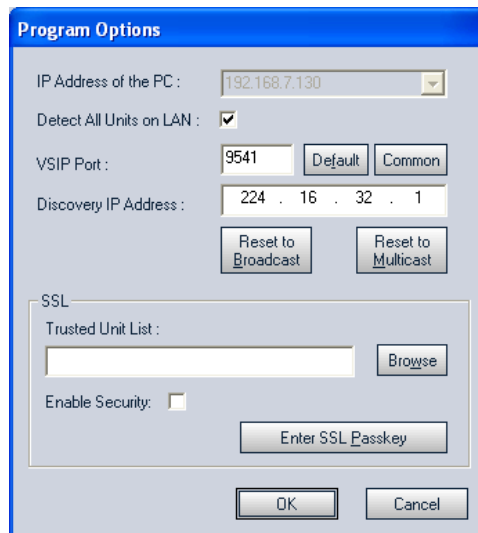


4. Switch to the **Units** tab and click **Discover**.

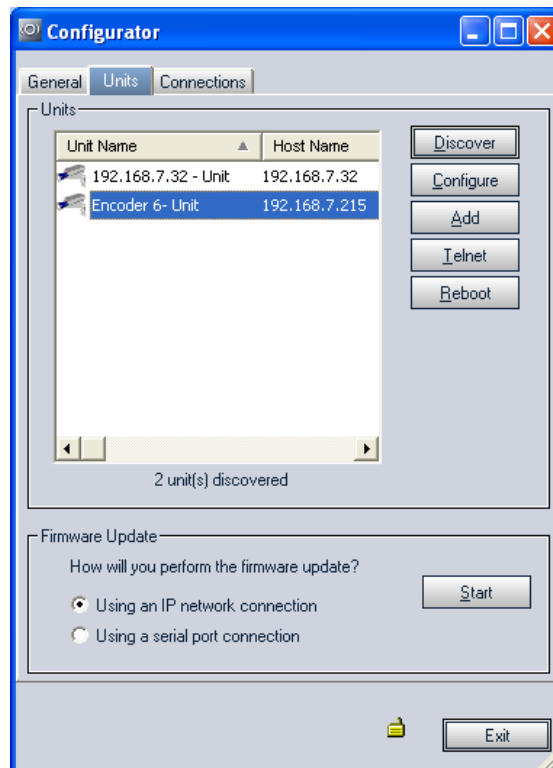

5. Select the unit whose firmware you would like to update. Make sure that the radio button labeled **Using an IP network connection** is selected in the **Firmware Update** box and click **Start**.

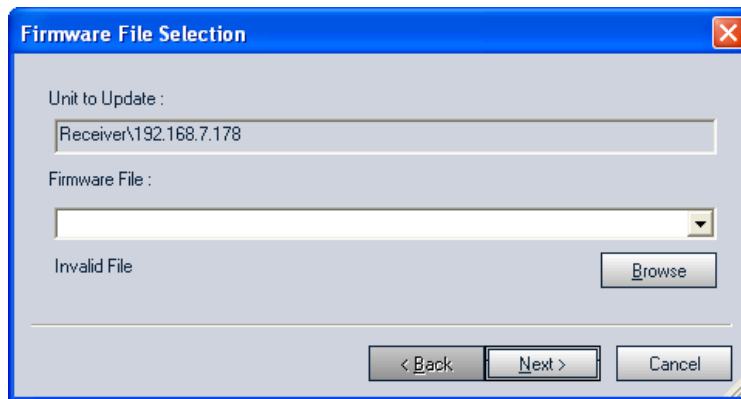

6. Click the **Browse** button to browse for the firmware file and then click **Next** and **Start**.

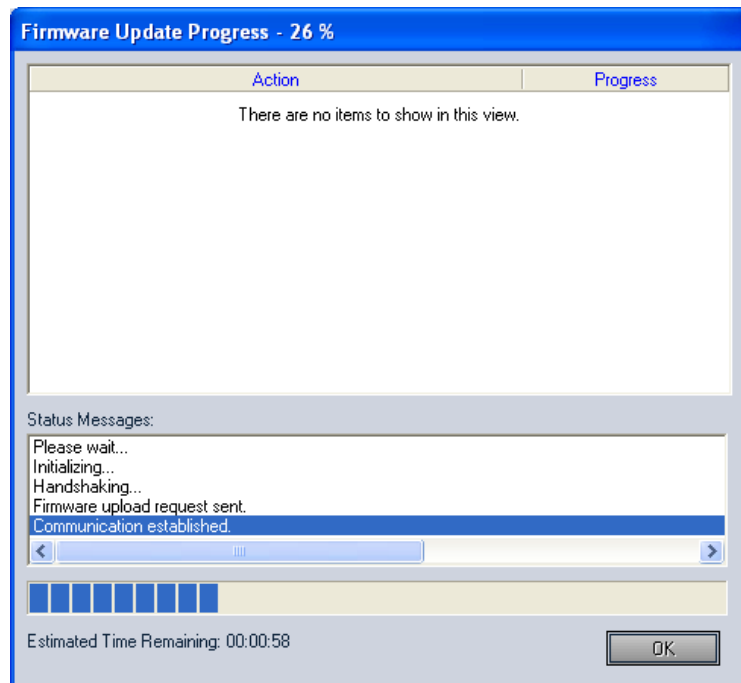

7. Click **OK** to exit the **Firmware Update Progress** window once the firmware update is complete.
8. Repeat steps 5-7 for each additional unit requiring a firmware update.